




Installation Instructions

Aztec Shower Panels

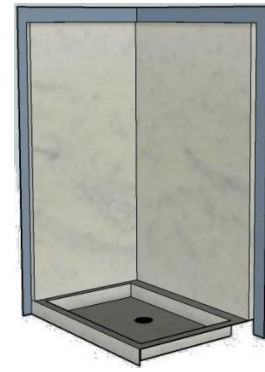

Before Beginning:

Aztec Panels are constructed from engineered marble. Although engineered marble is very resilient, please use extra care during installation to avoid chips or cracks due to rough handling or dropped tools


1

Starting with the back panel first, measure wall space width on the top and bottom, transferring measurements to the Aztec panel. Mark measurements with a chalk line and cut to final width using a circular saw and masonry blade. Apply a liquid nails or equivalent adhesive to the back of the panel and carefully set in place.

2

Locate finished edges and ensure that they are facing out. Dry fit panel and mark for final width. Set chalk line and cut to final width with a circular saw and masonry blade. Apply adhesive to the back of the panel and butt side panel against the previously installed back panel. Brace side panels in place until adhesive is dry.

Apply adhesive 8 to 12" apart:

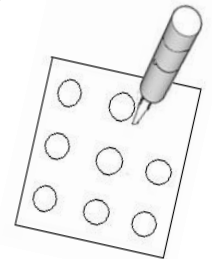

3

Fill all gaps and seams with a small bead of clear silicone to ensure that the seams are water tight.