




## Installation Instructions

### Aztec Shower Pans


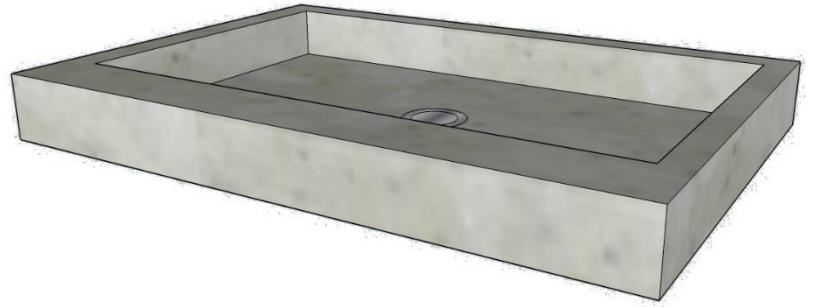


### Before Beginning:

Aztec Shower Pans are constructed from engineered marble. Although engineered marble is very resilient, please use extra care during installation to avoid chips or cracks due to rough handling or dropped tools.


# 1

Ensure site is level before installation. Using thin set or other leveling mix to level out subsurface if necessary.

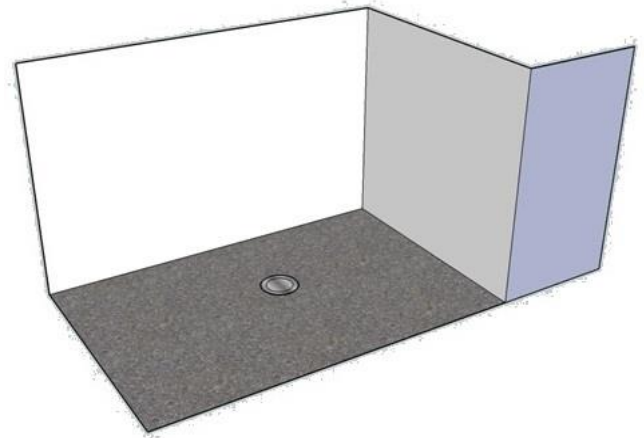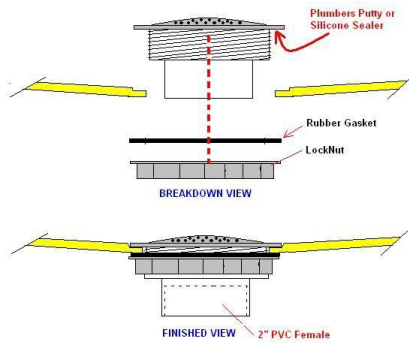

# 2

Install drain before installing pan. Use silicone to seal drain. We strongly recommend not using plumbers putty.

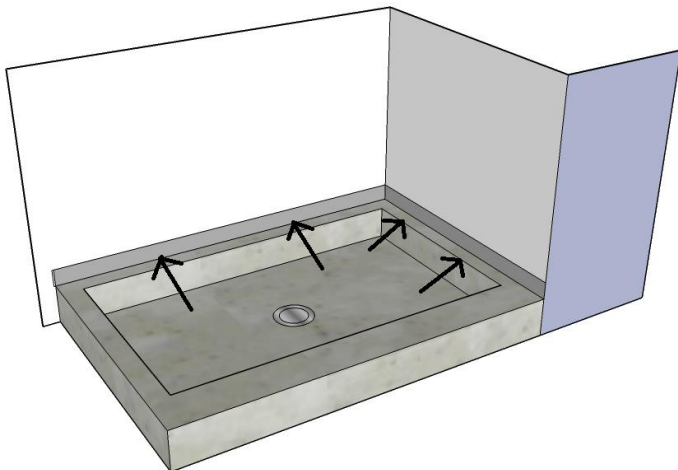

# 3

If pan does not have fiberglass flange installed, install marble flashing around edges of the pan against the wall and seal with silicone.