




## Installation Instructions

### Aztec Vanity Tops

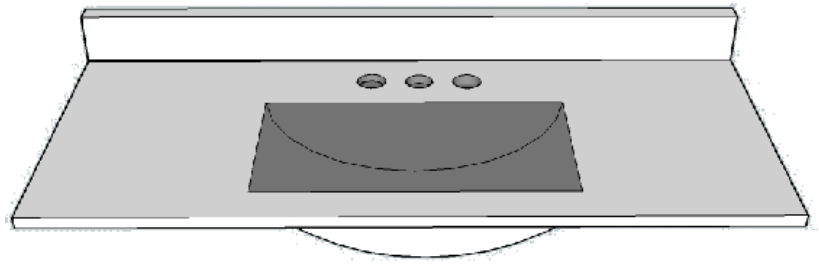

### Before Beginning:

Aztec Vanity Tops are constructed from engineered marble. Although engineered marble is very resilient, please use extra care during installation to avoid chips or cracks due to rough handling or dropped tools.

### 1

Remove vanity top from carton and test fit onto cabinet. Ensure there is ample room for fittings, water supply and drain connections. In corner applications, the wall is often not square. In this case, mark for square and make any necessary cuts with a circular saw and masonry blade.



### 2


Install 4" center set lavatory faucet (sold separately).

### 3

Carefully place vanity top onto cabinet and adjust to proper placement. Secure water supply lines and test for leaks.

### 4

Apply small bead of paintable caulking between integral backsplash and wall. If applicable, install side splash (sold separately). See reverse for side splash installation instructions.

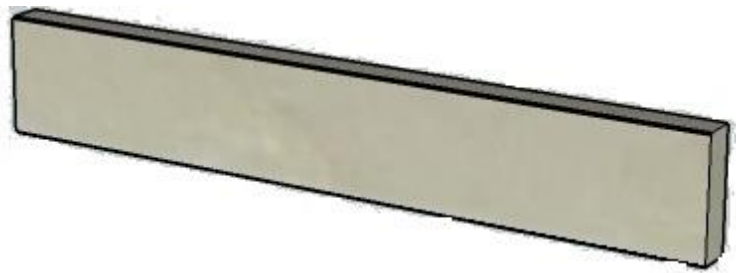

## Installation Instructions


### Aztec Side Splash

### Before Beginning:

Aztec Side Splashes are constructed from engineered marble. Although engineered marble is very resilient, please use extra care during installation to avoid chips or cracks due to rough handling or dropped tools. Apply

1

Apply clear adhesive silicone sealant generously to the unfinished side of the side splash.

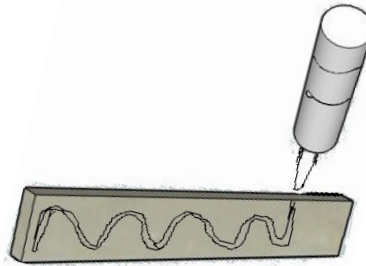

2

Firmly press the side splash to the wall, ensuring it sits square between the vanity top, corner and wall.



3

Apply a small bead of sealant on all four edges to complete installation. Utilize waterproof sealant when joining marble pieces and utilize paintable caulking between marble and wall. Utilize appropriate caulking colors for best installation results.